



Alphapoc 601: Hand programming



1. power on the device
2. push red and green button together for about 3 seconds
3. the display shows: "Password: 0000"
4. the password depends on the programming information you told us.
if there is no other password told from you then it is default: 1234
5. numbers are chosen with red button (up) and green button (down)
6. please move within the menu using the arrow keys (left/right)
7. after finishing password please push the right arrow key
8. the display will show:
 - A: [ON] 1234560
 - B: [ON] 1234561
 - C: [ON] 1234562
 - D: [ON] 1234563
9. navigate into the menu with the arrow keys, push red or green button for input information.
10. you can change the capcodes, each capcode can be separately switched on/off.
11. if you go ahead with the right arrow key, you will see the following menu:
 - BAUDRATE:
 - POLARITY:
 - FREQ:
 - PROGRAM EXIT
12. if you programming is finished you need to move on this page to "PROGRAM" and push the red button.
13. the display shows now: "EEPROM PROGRAMMING..."
14. if the device has finished the programming you will see:
"***FINISHED***"

© All rights on text and pictures reserved !

more information:

Alphapoc – Professional POCSAG DECODING
BS-Electronics GbR * Virchowstr.40 * 66424 Homburg
phone: 0049 6841 – 120 / 400 * Alphapoc-Hotline: phone: 0049
6841 – 120 / 412 more information and downloads: [www.alphapoc-](http://www.alphapoc-europe.de)
[europe.de](http://www.alphapoc-europe.de) Email: support@alphapoc-europe.de

your local dealer:
Alphapoc Support & Services
Hotline: 06841 – 120 / 400
Fax: 06841 – 120 / 409
Email: alphapoc@alphapoc.de